



GENEVO

User's manual



Radar Detector GENEVO ONE

Main functions of Genevo One?

Genevo One is designed to protect the driver from fines for speeding. Genevo One communicates with driver in English language and its main functions are detection of microwave radars (X / K / Ka narrow bands), laser guns, red light cameras and section speed cameras (GPS database).

Notifications:

Text warning and voice alert appears on Genevo One during radar alert. Strength of the signal and beeps expresses the intensity of the received signal. Signal strength has ten levels. GPS alerts are reported by voice. For example "Speed Camera".

Control:

1) *Left button MENU / ON-OFF*

Short press: You will enter into setup menu. During radar alert you will mute the volume. The next alert will be reported again in the standard volume.

Long press: Turn ON / OFF Genevo One.

2) *Middle button BRIGHTNESS / ALERT SUPPRESSION*

Short press: You can change the brightness of the display - Bright -> Dim -> Dark.

Long Press If you hold it during an alert you will mark the place of false radar reporting so at a given point detector will be suppressed during the next passage. If you suppress a false alert, detector will not detect radars in radius of about 150 meters. Hold button during the "suppressed" radar alert and this listing will be canceled. After next passage radar alert will be signaled normally.

3) *Right button SENSITIVITY / ADD YOUR OWN GPS POINT*

Short press: You can scroll between Highway / City / Auto City modes. In City or Auto City modes the sensitivity of X / K / Ka bands can be reduced according to user preference.

Long Press: Add your own GPS point.

4) *Buttons on the right side + / -*

Short press: Changing volume of Genevo One.

Menu:

Press *left button* for enter into menu.

Press *left button* to go from one item to the next.

Press VOLUME + or – (on the right side of detector) to change your setting within an item.

To complete this change, simply wait a few seconds without pressing a button. The unit will display "Set" to confirm your selection. Alternatively, you can get out of the menu by pressing the *right button*.

Items in the menu are as follows:

Test: On / Off - (Standard / Rapid). In standard switching on sounds startup song and then enumerating the detector's settings. During Rapid setting sounds only startup song.

Sensitivity: Highway mode / City mode. City mode sensitivity of X / K / Ka bands are reduced by 5 dB (approx. 30%).

The minimum speed for signaling radar: Off, 10 km/h, 20 km/h, 30km/h,....., 130 km/h

K-Band: On / Off

X-Band: On / Off

Ka-Band: On / Off

Laser: On / Off

Startup sound: On / Off

GPS connect announce: On / Off

Report GPS points: On / Off

Setting local time: Time zone change via + / -

Language: Český jazyk / Deutsch / English

All user point will be deleted: Press middle button to delete all user points.

Operating frequency:

GPS: SiRF STAR IV
Ka Band: 34,0GHz, 34,3GHz (± 120MHz)
K Band: 24.125GHz (± 70MHz)
X Band: 10.525GHz (± 50MHz)
Laser: 904nm

Technical parameters:

Operating temperature:
-20 - +85 ° C
Operating voltage: 11-16 V
Energy consumption: 300 mA normal, 360 mA max. (12V)
Dimensions: 62 * 92 * 34 mm

Database Updates:

Database update is recommended to check once in three months. Download the new database is performed according to the instructions www.genevo.cz/aktualizace/ while at www.genevo.cz/odber/ you can register and receive notifications of new and updated database to your email.

Your Dealer:

A large, empty rectangular box with a thin black border, intended for the user to provide their dealer's name and contact information.